

GRAN RALLY

SWITCH A (Derecha)				
MONEDERO 25.				
SWITCH		MODE		
1	3	5	MONEDAS	PART.
OFF	OFF	OFF	1	1
OFF	OFF	ON	2	1
OFF	ON	OFF	3	1
ON	OFF	OFF	1	2
ON	OFF	ON	1	3
ON	ON	OFF	2	3
OFF	ON	ON	1	6
ON	ON	ON	1	5
MONEDERO 50.				
SWITCH		MODE		
2	7		MONEDAS	PART.
OFF	OFF		1	1
OFF	ON		2	1
ON	OFF		1	2
ON	ON		2	3
INDICACION VELOCIDAD				
SWITCH		MODE		
4		Km/h - Mp/h		
ON		Km/h		
OFF		Mp/h		

SONIDO EN PRESENTACION		VELOCIDAD MAX.	
SWITCH		SWITCH	MODE
6	SI/NO	8	Reducida
ON	NO	ON	Elevada
OFF	SI	OFF	Reducida
			Elevada

SWITCH B (Izquierda)			
DIFICULTAD CARRERA			
SWITCH		MODE	
1	3		
OFF	OFF	D	MAX.
ON	OFF	C	
OFF	ON	B	
ON	ON	A	MIN.
8			
ON			
DIFICULTAD PARA CLASIFICACION			
SWITCH		MODE	
5	7		
OFF	OFF	D	MAX.
ON	OFF	C	
OFF	ON	B	
ON	ON	A	MIN.
TIEMPO PARA CLASIFICACION			
SWITCH		MODE	
6		Tiempo	
ON		90 Seg.	
OFF		120 Seg.	

NUMERO DE VUELTAS		
SWITCH		MODE
2	4	
OFF	OFF	6
ON	OFF	5
OFF	ON	4
ON	ON	3