


SALAMANDER

Konami

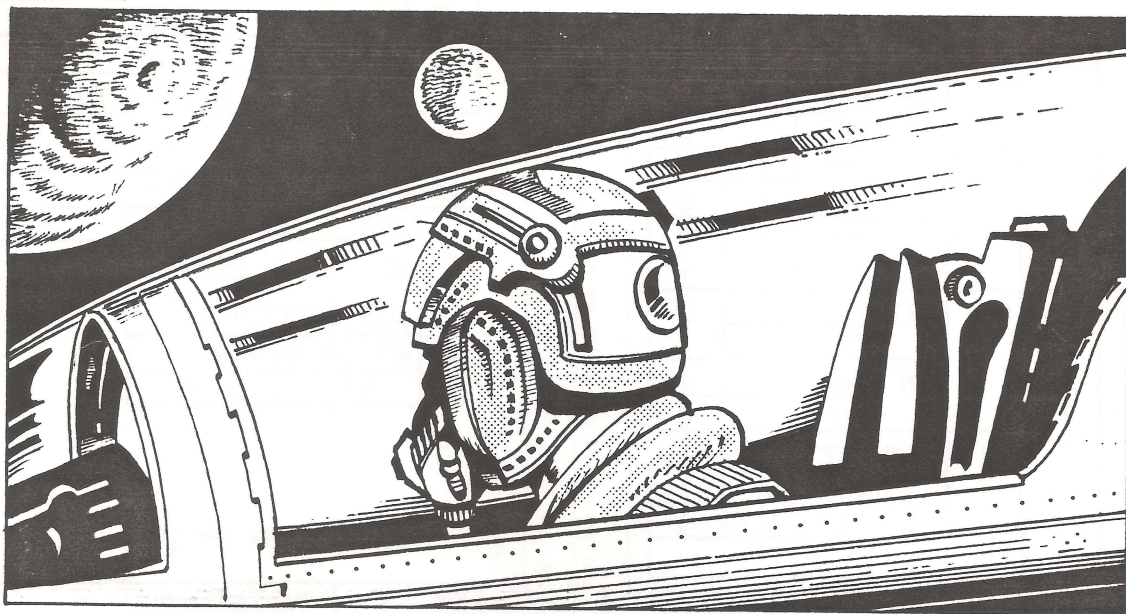

TECFRI S. BERLIN, 11-17 TEL. 3219669-3219404 TELEX 97967JCAA-E FAX: (34-3) 250 43 56 08014 BARCELONA
DELEGACION TECFRI LEVANTE. AVDA. DE CAMPANAR, 116 TEL. 348 46 25 46015 VALENCIA

DIP SWITCH Nº 1

DW	4	3	2	1	COIN	CRED
○	OFF	OFF	OFF	OFF	1	1
				ON	1	2
			ON	OFF	1	3
				ON	1	4
		ON	OFF	OFF	1	5
				ON	1	6
			ON	OFF	1	7
				ON	2	1
	ON	OFF	OFF	OFF	2	3
				ON	2	5
			ON	OFF	3	1
				ON	3	2
		ON	OFF	OFF	3	4
				ON	4	1
			ON	OFF	4	3
				ON		

ON							
OFF	●	●	●	●	●	●	●
	1	2	3	4	5	6	7

DIP SWITCH Nº 2

SW	2	1	Nº JUGADORES
○	OFF	OFF	2
		ON	3
	ON	OFF	5
		ON	7

SW	3	MONEDEROS A USAR
	OFF	UN SOLO MONEDERO
	ON	DOS MONEDEROS

SW	5	4	VEGES CONTINUA JUEGO
○	OFF	OFF	1
		ON	3
	ON	OFF	5
		ON	9

SW	7	6	DIFICULTAD
○	OFF	OFF	FACIL
		ON	NORMAL
	ON	OFF	DIFICIL
		ON	MUY DIFICIL

SW	8	SONIDO
○	OFF	SIN SONIDO
	ON	CON SONIDO

DIP SWITCH 2							
ON	●		●	●	●	●	●
OFF		●				●	
	1	2	3	4	5	6	7

DIP SWITCH Nº 3


SW	1	PANTALLA
○	OFF	NORMAL
	ON	INVERTIDA

SW	3	MODOS
○	OFF	JUEGO
	ON	CHEQUEO

○		

ON			●
OFF	●	●	●
	1	2	3

LADO COMPONENTES			LADO SOLDADURA		
MASA	28	1 1	MASA	28	
MASA	27	2 2	MASA	27	
+ 5	26	3 3	+ 5	26	
+ 5	25	4 4	+ 5	25	
	29	5 5		29	
+ 12	23	6 6	+ 12	23	
	22	7 7		22	
CONTADOR IZQUIERDO	21	8 8	CONTADOR DERECHO	21	
	20	9 9		20	
ALTAVOZ +	19	10 10	ALTAVOZ	19	
	18	11 11		18	
ROJO	17	12 12	VERDE	17	
AZUL	16	13 13	SINCRONISMO	16	
MASA VIDEO	15	14 14	SERVICIO	15	
	14	15 15		14	
MONEDERO 1	13	16 16	MONEDERO 2	13	
1 JUGADOR STAR	12	17 17	12 JUGADOR STAR	12	
1 JUGADOR ARRIBA	11	18 18	12 JUGADOR ARRIBA	11	
1 JUGADOR ABAJO	10	19 19	102 JUGADOR ABAJO	10	
1 JUGADOR IZQUIERDA	9	20 20	9 2 JUGADOR IZQUIERDA	9	
1 JUGADOR DERECHA	8	21 21	8 2 JUGADOR DERECHA	8	
1 JUGADOR DISPARO	7	22 22	2 2 JUGADOR DISPARO	7	
1 JUGADOR MISIL	6	23 23	6 2 JUGADOR MISIL	6	
	5	24 24		5	
	4	25 25		4	
	3	26 26		3	
MASA	2	27 27	MASA	2	
MASA	1	28 28	MASA	1	

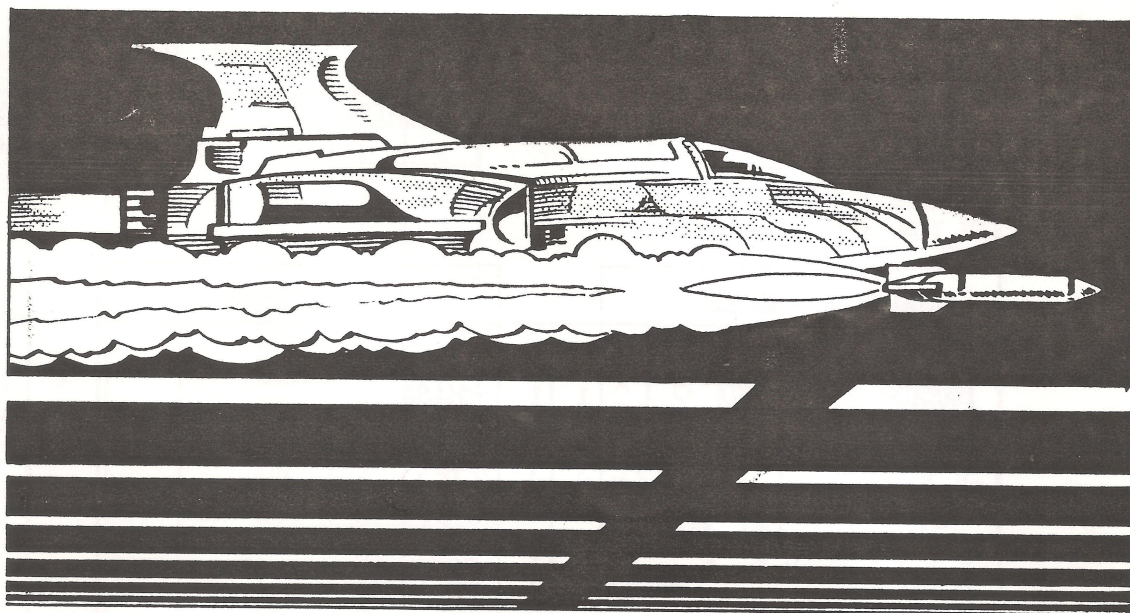

FABRICADO POR:

