

CONECTOR Y SWITCH AMBUSH

HAMBUS

CARA COMPONENTES

- 1 A + 5 VCC
- 2 A + 5 VCC
- 3 A + 12 VCC CONTAD. MECANICOS
- 4 A ACELERADOR UNO
- 5 A DISPARO UNO
- 6 A ACELERADOR DOS
- 7 A DISPARO DOS
- 8 A DOS JUGADORES
- 9 A UN JUGADOR
- 10 A MONEDERO DOS
- 11 A MONEDERO UNO
- 12 A AZUL
- 13 A VERDE
- 14 A ROJO
- 15 A SINCRONISMO
- 16 A + 12 VCC SONIDO
- 17 A MASA SONIDO
- 18 A MASA

CARA SOLDADURA

- 1 B MASA
- 2 B MASA
- 1 B + 12 CONTAD. MECANICOS
- 4 B ARRIBA UNO
- 5 B ABAJO UNO
- 6 B IZQUIERDA UNO
- 7 B DERECHA UNO
- 8 B ARRIBA DOS
- 9 B ABAJO DOS
- 10 B IZQUIERDA DOS
- 11 B DERECHA DOS
- 12 B CONTADOR
- 13 B CONTADOR
- 14 B CONTADOR
- 15 B ALTAVOZ DERECHO (3)
- 16 B ALTAVOZ IZQUIERDO (4)
- 17 B 5 V
- 18 B + 5 V

- 1) +5 V 4A
- 2) +12 V (2A)
- 3) ALTAVOZ 10 W.
- 4) ALTAVOZ 10 W.
- 5) COMUN CONTADORES

(notas)

SW	1	2	
	OFF	OFF	6 NAVES
	ON	OFF	5 NAVES
	OFF	ON	4 NAVES
	ON	ON	3 NAVES

SW 3	ON	
	OFF	(PROGRESIVA)
SW 4	ON	
	OFF	FREE PLAY

	1N(11 A)	1N(10 A)
SW 5 ON	1 CREDITO	2 CREDITO
OFF	12 1 CREDITO	3 CREDITO
	22 2 CREDITO	

SW 6 ON FACIL
OFF DIFICIL

SW 7 ON 80.000 POINTS NAVE EXT.
OFF 40.000 POINTS NAVE EXT.

SW ON MESA (JAPON)
OFF ESPAÑA

HAMBOS

COMPONENTS SIDE

1 A + 5 VCC
2 A + 5 VCC
3 A + 12 VCC MECANIC COIN COUNTERS
4 A acelerator one
5 A shot one
6 A acelerator two
7 A shot two
8 A Two players
9 A One players
10 A Two coins
11 A One coin
12 A Blue
13 A Green
14 A Red
15 A Sync
16 A + 12 VCC SOUND
17 A GROUND SOUND
18 A GROUND

- 1) + 5 V 4A
- 2) + 12 V SOUND 2A
- 3) SPEAKER 10W RIGHT
- 4) SPEAKER 10W LEFT
- 5) COMMON GROUND BOUTTIONS

SOLDERING SIDE

1 B GROUND
2 B GROUND
3 B + 12 MECANIC COIN COUNTERS
4 B UP ONE
5 B DOWN ONE
6 B LEFT ONE
7 B RIGHT ONE
8 B UP TWO
9 B DOWN TWO
10 B LEFT TWO
11 B RIGHT TWO
12 B COUNTER
13 B COUNTER
14 B COUNTER
15 B SPEAKER RIGHT
16 B SPEAKER LEFT
17 B + 5 V DC
18 B + 5 V DC

A M B U S H

SW I C H

1

ON
OFF
ON
OFF

2

ON
ON
OFF
OFF

3 NAVES
4 NAVES
5 NAVES
6 NAVES

3

ON
OFF
ON
OFF

4

ON
ON
OFF
OFF

5

ON
ON
ON
ON

1 MON 1 PAR
1 MON 2 PAR
1 MON 3 PAR
1 MON 4 PAR

ON
ON
ON
OFF

ON
OFF
OFF
OFF

OFF
ON
OFF
OFF

2 MON 1 PAR
2 MON 3 PAR
2 MON 5 PAR
CARTA AJUSTE/FREE PL

6

ON
OFF

FACIL
DIFICIL

7

ON
OFF

120.000 NAVE EXTRA
80.000 NAVE EXTRA

8

ON
OFF

INVERSION 2º PLAY
NO INVERSION