



# SNOW BOARD

## OPERATOR'S MANUAL

### POSITION OF TEST BUTTON

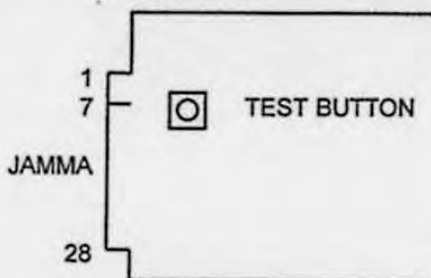

### MONO SOUND

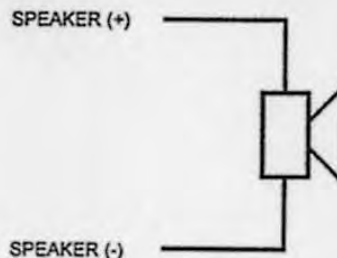

### TEST

Push Test Button to enter Test Options Screen:

TEST OPTIONS
> Screen Adjust
Red
Green
Blue
Control Test
Sound Adjust
Game Options
Start Game

Use joystick to move cursor. Push Speed Button to select :

- Screen adjust.
- Red.
- Green.
- Blue.
- Control test.
- Sound adjust.
- Game options:

GAME OPTIONS
Slot 1: 1 Coins = 1 Credit
Slot 2: 1 Coins = 1 Credit
Coin to Start: 1
Free Play: No
Difficult: Normal
Advertise Sound: No
Save & Exit
Exit (No Save)

Use joystick to move cursor. Push Speed Button to change options.

MONITOR

HORIZONTAL

GAME STYLE

1 PLAYER  
OR  
2 PLAYERS

### PCB CONECTOR JAMMA

SOLDER SIDE			COMPONENTS SIDE	
GND	A	1	GND	
GND	B	2	GND	
+5V	C	3	+5V	
+5V	D	4	+5V	
N.C.	E	5	N.C.	
+12V	F	6	+12V	
	H	7		
COIN COUNTER 2 (COIN LOCK OUT 2)	J	8	COIN COUNTER 1 (COIN LOCK OUT 1)	
SPEAKER (-)	K	9	SPEAKER (+)	
N.C.	L	10	N.C.	
VIDEO GREEN	M	11	VIDEO RED	
VIDEO SYNC	N	12	VIDEO BLUE	
SERVICE	P	13	VIDEO GND	
N.C.	R	14	TEST SW	
COIN 2	S	15	COIN 1	
2P START	T	16	1P START	
2P UP	U	17	1P UP	
2P DOWN	V	18	1P DOWN	
2P LEFT	W	19	1P LEFT	
2P RIGHT	X	20	1P RIGHT	
2P SPEED	Y	21	1P SPEED	
N.C.	Z	22	N.C.	
N.C.	a	23	N.C.	
N.C.	b	24	N.C.	
N.C.	c	25	N.C.	
N.C.	d	26	N.C.	
GND	e	27	GND	
GND	f	28	GND	

### CONTROL PANEL



CONTROL STICK



SPEED