



LOTOPLAY

Tabla de combinaciones de créditos. (Moneda/Crédito)

SWITCH				MONEDERO 1	MONEDERO 2
4	3	2	1		
ON	ON	ON	ON	1/1	1/2
ON	ON	ON	OFF	1/1	1/3
ON	ON	OFF	ON	1/1	1/4
ON	ON	OFF	OFF	1/1	1/5
ON	OFF	ON	ON	1/2	1/2
ON	OFF	ON	OFF	1/2	1/3
ON	OFF	OFF	ON	1/2	1/4
ON	OFF	OFF	OFF	1/2	1/5
OFF	ON	ON	ON	2/1	1/1
OFF	ON	ON	OFF	2/1	1/2
OFF	ON	OFF	ON	2/1	1/3
OFF	ON	OFF	OFF	2/1	1/4
OFF	OFF	ON	ON	3/1	1/1
OFF	OFF	ON	OFF	3/1	1/2
OFF	OFF	OFF	ON	4/1	1/1
OFF	OFF	OFF	OFF	4/1	1/2

Tabla de porcentajes de lotería:

SWITCH		PORCENTAJE
8	7	
ON	ON	2%
ON	OFF	5%
OFF	ON	7%
OFF	OFF	10%

Los switch 5 y 6 no se utilizan.

