



| LADO COMPONENTES    |    |    | LADO SOLDADURA      |  |  |
|---------------------|----|----|---------------------|--|--|
| MASA                | 1  | 1  | MASA                |  |  |
| MASA                | 2  | 2  | MASA                |  |  |
| + 5                 | 3  | 3  | + 5                 |  |  |
| + 5                 | 4  | 4  | + 5                 |  |  |
|                     | 5  | 5  |                     |  |  |
| + 12                | 6  | 6  | + 12                |  |  |
|                     | 7  | 7  |                     |  |  |
| CONTADOR IZQUIERDO  | 8  | 8  | CONTADOR DERECHO    |  |  |
|                     | 9  | 9  |                     |  |  |
| ALTAVOZ +           | 10 | 10 | ALTAVOZ -           |  |  |
|                     | 11 | 11 |                     |  |  |
| ROJO                | 12 | 12 | VERDE               |  |  |
| ACUL                | 13 | 13 | SINCRONISMO         |  |  |
| MASA VIDEO          | 14 | 14 | SERVICIO            |  |  |
|                     | 15 | 15 |                     |  |  |
| MONEDERO 1          | 16 | 16 | MONEDERO 2          |  |  |
| 1 JUGADOR STAR      | 17 | 17 | 2 JUGADOR STAR      |  |  |
| 1 JUGADOR ARRIBA    | 18 | 18 | 2 JUGADOR ARRIBA    |  |  |
| 1 JUGADOR ABAJO     | 19 | 19 | 2 JUGADOR ABAJO     |  |  |
| 1 JUGADOR IZQUIERDA | 20 | 20 | 2 JUGADOR IZQUIERDA |  |  |
| 1 JUGADOR DERECHA   | 21 | 21 | 2 JUGADOR DERECHA   |  |  |
| 1 JUGADOR DISPARO   | 22 | 22 | 2 JUGADOR DISPARO   |  |  |
| 1 JUGADOR DISPARO   | 23 | 23 | 2 JUGADOR DISPARO   |  |  |
| 1 JUGADOR DISPARO   | 24 | 24 | 2 JUGADOR DISPARO   |  |  |
|                     | 25 | 25 |                     |  |  |
|                     | 26 | 26 |                     |  |  |
| MASA                | 27 | 27 | MASA                |  |  |
| MASA                | 28 | 28 | MASA                |  |  |

| DIP SWITCH B       |     | 1   | 2   | 3          | 4   | 5   | 6   | 7   | 8   |
|--------------------|-----|-----|-----|------------|-----|-----|-----|-----|-----|
| CON SONIDO EXH.    |     |     |     |            |     |     |     |     | OFF |
| SIN SONIDO EXH.    |     |     |     |            |     |     |     |     | ON  |
| PANTALLA NORMAL    |     |     |     |            |     |     |     | OFF |     |
| PANTALLA INVERT.   |     |     |     |            |     |     |     | ON  |     |
| BONUS 100000       |     |     |     |            |     | OFF | OFF |     |     |
| 100000 CADA 100000 |     |     |     |            |     | ON  | OFF |     |     |
| 150000 CADA 100000 |     |     |     |            |     | OFF | ON  |     |     |
| 200000 CADA 100000 |     |     |     |            |     | ON  | ON  |     |     |
| JUGADORES 3        |     |     |     |            | OFF |     |     |     |     |
| JUGADORES 5        |     |     |     |            | ON  |     |     |     |     |
| DIFICULTAD 1       | OFF | OFF | OFF |            |     |     |     |     |     |
| DIFICULTAD 2       | ON  | OFF | OFF |            |     |     |     |     |     |
| DIFICULTAD 3       | OFF | ON  | OFF |            |     |     |     |     |     |
| DIFICULTAD 4       | ON  | ON  | OFF |            |     |     |     |     |     |
| DIFICULTAD 5       | OFF | OFF | ON  |            |     |     |     |     |     |
| DIFICULTAD 6       | ON  | OFF | ON  |            |     |     |     |     |     |
| DIFICULTAD 7       | OFF | ON  | ON  |            |     |     |     |     |     |
| DIFICULTAD 8       | ON  | ON  | ON  |            |     |     |     |     |     |
| DIP SWITCH 2       |     |     |     |            |     |     |     |     |     |
| CON SONIDO         |     |     |     |            |     |     |     |     | OFF |
| SIN SONIDO         |     |     |     |            |     |     |     |     | ON  |
| CONTINUA JUEGO     |     |     |     |            |     |     |     | OFF |     |
| NO CONTINUA        |     |     |     |            |     |     |     | ON  |     |
| 1 MONEDA 1 PARTIDA | OFF | OFF | OFF | OFF        | OFF | OFF | OFF |     |     |
| 1 " 2 "            | ON  | OFF | OFF | ON         | OFF | OFF | OFF |     |     |
| 1 " 3 "            | OFF | ON  | OFF | OFF        | ON  | OFF | OFF |     |     |
| 1 " 4 "            | ON  | ON  | OFF | ON         | ON  | OFF | OFF |     |     |
| 1 " 6 "            | OFF | OFF | OFF | OFF        | OFF | OFF | ON  |     |     |
| 2 " 1 "            | ON  | OFF | ON  | ON         | OFF | ON  | ON  |     |     |
| 3 " 1 "            | OFF | ON  | ON  | OFF        | ON  | ON  | ON  |     |     |
| 4 " 1 "            | ON  | ON  | ON  | ON         | ON  | ON  | ON  |     |     |
| MONEDERO 1         |     |     |     | MONEDERO 2 |     |     |     |     |     |

DIP SWITCH 3 TODO SIEMPRE EN OFF